


**Protects RV appliances from mud daubers, wasps,
mice, and birds while maintaining air flow.**



**Magic Chef
Atwood/Wedgewood
Suburban**

INSTALLATION INSTRUCTIONS

1. Locate "anchor points" (⊕) on exterior appliance vent.
2. Place screen over appliance vent and mark location of anchor points on screen with felt tip pen.
3. Attach spring's shorter end to marked anchor points on inside surface of screen.
4. Place screen with attached spring(s) over appliance vent. Holding rounded end of installation pin, insert pin thru screen and center of attached spring to insert pin notch onto the center bar of spring coil.
5. Push spring hook past appliance anchor point. Turn installation pin to hook spring onto anchor point and release slowly.
6. If needed, repeat Steps 4 & 5 for second spring.
7. Keep installation pin for removal and re-installation of screen for cleaning. **(Screen must be inspected monthly and cleaned when necessary to maintain proper air flow.)**

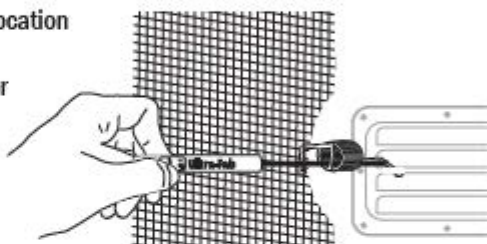

Hook should engage
three wires

NOTE: Screen position can be adjusted using other anchor points.
Gaps between screen and RV siding may require caulking.



Ultra-Fab Products, Inc.

Elkhart, Indiana

800-860-7571

ultra-fab.com

sales@ultra-fab.com



Scan For Catalog & Website