




ADUSTABLE FOOT PAD INSTALLATION INSTRUCTIONS

WARNING


- Adjustable Foot Pad is used to level the 5th Wheel RV by adjusting the length of the extended 5th Wheel Landing Gear .
- Apply RV parking break before operating the Adjustable Foot Pad
- Do not allow hands, feet, or any other bodily parts or debris under the foot pad when adjusting the foot pad length.

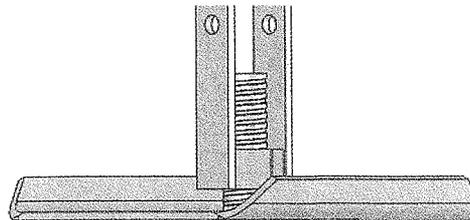

Adjustable Foot Pad

Assembly Instructions

1. Remove the original foot pad from the 5th wheel landing gear and keep the locking pin.
2. Insert the Adjustable Foot Pad into the inner tube of the 5th wheel landing gear.
3. Lock the Adjustable Foot Pad with the original locking pin through the 3rd hole.

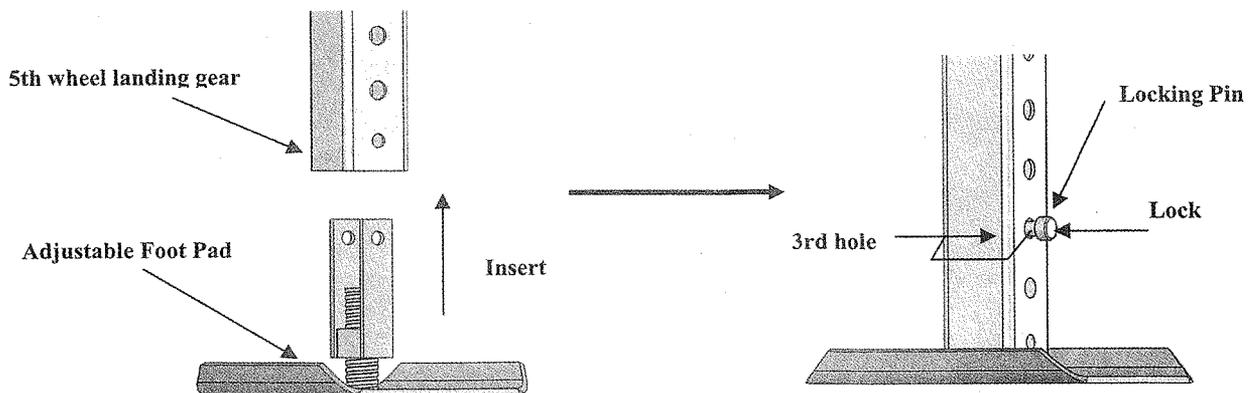

Operation

1. Adjust the length of the Adjustable Foot Pad by turning the foot pad:
 - a. Counter clock wise "DOWN"
 - b. Clock wise "UP"
2. Turn the foot pad all the way up to minimize rattling noise when the RV is traveling

