



## Installation Instructions for Levelers

(PN #48-979050, 48-979052, 48-979051)

### Illustration 1

**- PARKING YOUR RV**

1. Select a campsite with a flat parking area.
2. Position RV in the most level location of the site.

**- Position UF LEVELERS**

1. Determine which wheels must be raised.
2. Always leave one wheel on the ground.
3. Create a smooth area under the wheels to be raised by removing large stones and debris.
4. Stack UF LEVELERS to the required height. (Sample configurations are shown below.)
5. Place UF LEVELERS against the wheels to be raised.

**- Drive RV Onto UF LEVELERS**

1. Slowly drive RV onto the top of the stack.
2. If the vehicle is still not level, slowly drive RV off of the stack and remove or add UF LEVELERS to achieve a level position.
3. Slowly drive RV back onto the stack.
4. Set the parking brake and turn off the engine.

**- Leaving Your Campsite**


1. Slowly drive RV off of the stack of UF LEVELERS.
2. Set the parking brake and turn off the engine.
3. Retrieve the UF LEVELERS and return them to the nylon storage bag.
4. Store the complete UF LEVELERS kit in a secure storage compartment in RV for the next use.

### SAFETY WARNING

1. DO NOT POSITION UF LEVELERS WHILE THE ENGINE IS RUNNING OR THE VEHICLE IS IN MOTION.
2. ENSURE THAT ALL PEOPLE ARE STANDING CLEAR OF THE VEHICLE PRIOR TO MOVING IT ONTO THE STACK OF UF LEVELERS
3. NEVER CRAWL UNDER THE VEHICLE WHEN UF LEVELERS ARE IN USE.
4. MAXIMUM STACK HEIGHT IS NOT TO EXCEED 5"

### **SAMPLES AND HELPFUL HINTS**

UF LEVELERS can be stacked in several configurations to achieve the required lift.

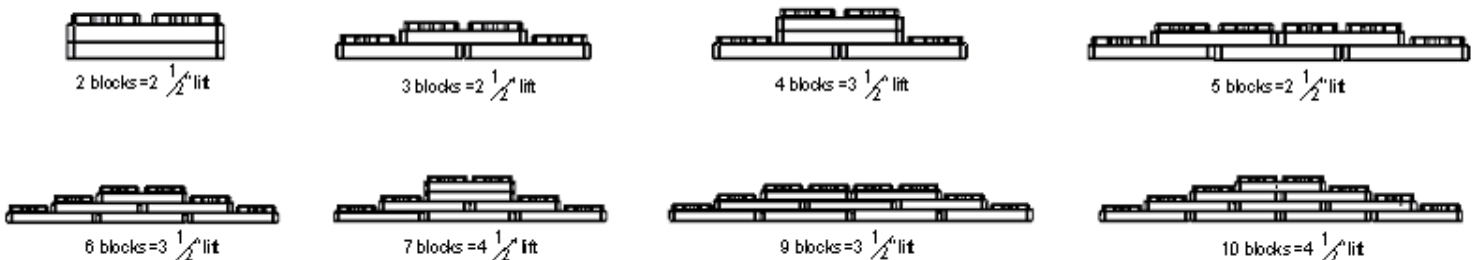

- When using UF LEVELERS under hydraulic jack or fifth-wheel support jacks, always stack at them least 2 blocks high.
- Do not use blocks upside down.