



57985 State Road 19, South
Elkhart, Indiana 46517
PH (574) 294-7571
FX (574) 294-4980
www.ultra-fab.com

Ultra-Fab Leveling Blocks
48-979050, 48-979051, 48-979052

INSTALLATION/OPERATION

Ultra-Fab Leveling Blocks
48-979050, 48-979051, 48-979052

Step 1

Parking your RV

- Position RV in the most level location of the site.

Step 2

Position UF Leveling Blocks

- Determine which wheels must be raised to level the RV. Always leave one wheel on the ground.
- Determine how high wheels need to be raised. Each UF Leveling Block will raise the wheel / RV by 1".
- Create a smooth area under the wheels to be raised by removing large stones and debris.
- Stack UF Leveling Blocks to the required height. (Sample configurations are shown below.)
- Place UF Leveling Blocks against the wheels to be raised.

Step 3

 
Drive RV Onto UF Leveling Blocks

- Slowly drive RV forward and move UF Leveling Blocks to position where tires were before moving forward.
- Slowly drive RV onto the top of the stack.
- If the vehicle is still not level, slowly drive RV off the stack and remove or add UF Leveling Blocks to achieve a level position.
- Slowly drive RV back onto the stack.
- Set the parking brake and turn off the engine.
- Proceed to secure and stabilize the RV depending on model and equipment available.

Step 4

Leaving Your Campsite

- Slowly drive RV off the stack of UF Leveling Blocks.
- Set the parking brake and turn off the engine.
- Retrieve the UF Leveling Blocks and return them to the nylon storage bag.



2 blocks = 2 $\frac{1}{2}$ " lift



3 blocks = 2 $\frac{1}{2}$ " lift



4 blocks = 3 $\frac{1}{2}$ " lift



5 blocks = 2 $\frac{1}{2}$ " lift



6 blocks = 3 $\frac{1}{2}$ " lift



7 blocks = 4 $\frac{1}{2}$ " lift



8 blocks = 3 $\frac{1}{2}$ " lift



10 blocks = 4 $\frac{1}{2}$ " lift

Safety Warnings:

- Never position UF Leveling Blocks while vehicle is in motion.
- Ensure that all people are clear of the vehicle prior to moving it on to the stack of UF Leveling Blocks.
- Never crawl under the vehicle when UF Leveling Blocks are in use.
- Maximum stack height is 5". Do not exceed 5" stack height.
- When using under hydraulic jacks or fifth-wheel support jacks, always stack at least 2 blocks high.
- Do not use blocks upside down.