



## Installation Instructions for Solar vent

(PN #53-945001)

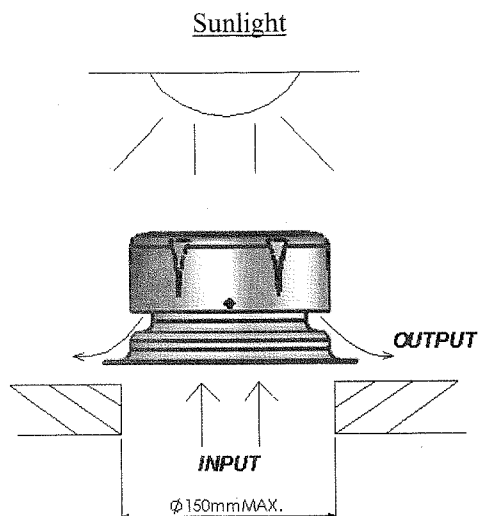


Illustration 1

MINI SOLAR VENT was designed to replace all RV plumbing caps.

1. Remove existing plumbing cap. Remove all old roof sealant for a minimum of 2" entirely around the MINI SOLAR VENT flange.
2. Place the MINI SOLAR VENT over the plumbing pipe vent opening and trace a pencil line around the flange to verify the clean seal area and plumbing vent clearance.
3. **CAUTION.** When installing the MINI SOLAR VENT only use butyl tape or caulking sealant compatible with the plastic and roof surface. **DO NOT** use materials containing solvents such as or similar to Xylene, Toluene, Methyl Ethyl Ketone, Acetate or Acetone as they can damage the flange. Silicone sealants, such as G.E. Silicone II (non-paintable) used for outdoor applications have proven suitable for this installation.

Apply sealant or caulking with in the area you have traced on the roof with a pencil. Apply it carefully to avoid gaps that may allow water to enter.

4. Fasten the MINI SOLAR VENT to the roof with the screws provided
5. Apply additional roof sealant over the screw heads and around the edge of the flange.
6. **DO NOT** put your finger or other things in the solar vent.