



## INSTRUCTIONS

### FUNCTION

The purpose of the Super Grip Chock XL is to enhance trailer occupant comfort by preventing the tandem wheels from moving. When the wheels are chocked, the annoying rocking motion is essentially eliminated.

### THINGS TO AVOID

Do not over tighten this wheel chock. Damage can be done to tires or Super Grip Chock. This damage is not covered by the warranty.



**Do not rely on this Super Grip Chock as a brake. While it will assist in braking, other independent devices such as blocks or wedges should also be used.**

### OPERATION / ADJUSTMENT

As the drawing shows, the Super Grip Chock is to be positioned between the tandem wheels at the wheel centerline. It functions by pressing a fixed distance outward (side to side) against the two wheels, locking one wheel to the other. Your Super Grip Chock is adjustable for tandem wheel spacing from approximately 3.5" – 17". The adjustment is accomplished by turning the nut on the threaded rod protruding from the bottom of the unit. As it is shipped, the unit is in its narrowest position and will not function. To adjust the width the first step is to pull the unit apart (wider). The threaded rod will then protrude further, exposing more threads between the chock and the \*adjusting nut. Hand-tighten the \*adjusting nut clockwise. Use the ratchet wrench (included – UF# 21-001093) for final tightening. The padlock (UF# 21-001092) is provided to lock the cover over the tightening bolt to discourage theft of the trailer or wheel chock.

### STIFFNESS

The footpads and locking cover may be a little stiff in movement. Working the pieces open and closed over its range a few times will normally correct this.

### TIRES

The performance of the Super Grip Chock XL is dependent on proper trailer tire pressures. Check tire pressures frequently for safety, good tire wear and good chock performance.

### SERVICE


There is no specific service required of your Super Grip Chock XL. A little light lubricant on the pivots from time to time will enhance useful life.

### WARRANTY

ULTRA-FAB PRODUCTS, INC. warrants that this product will be free from defects in material and workmanship for the lifetime of the original purchaser. Should a failure to conform to this warranty appear, ULTRA-FAB PRODUCTS, INC. shall, upon notification thereof, and proof of purchase, correct such non-conformity, at our option, by repair or replacement FOB factory of the defective parts.

### LIMITATION OF LIABILITY

Neither party shall be liable for special, indirect, incidental or consequential damages. The remedies of the purchaser, as set forth herein, are exclusive, and the liability of ULTRA-FAB PRODUCTS, INC. shall not exceed the price of the equipment or part on which such liability is based.

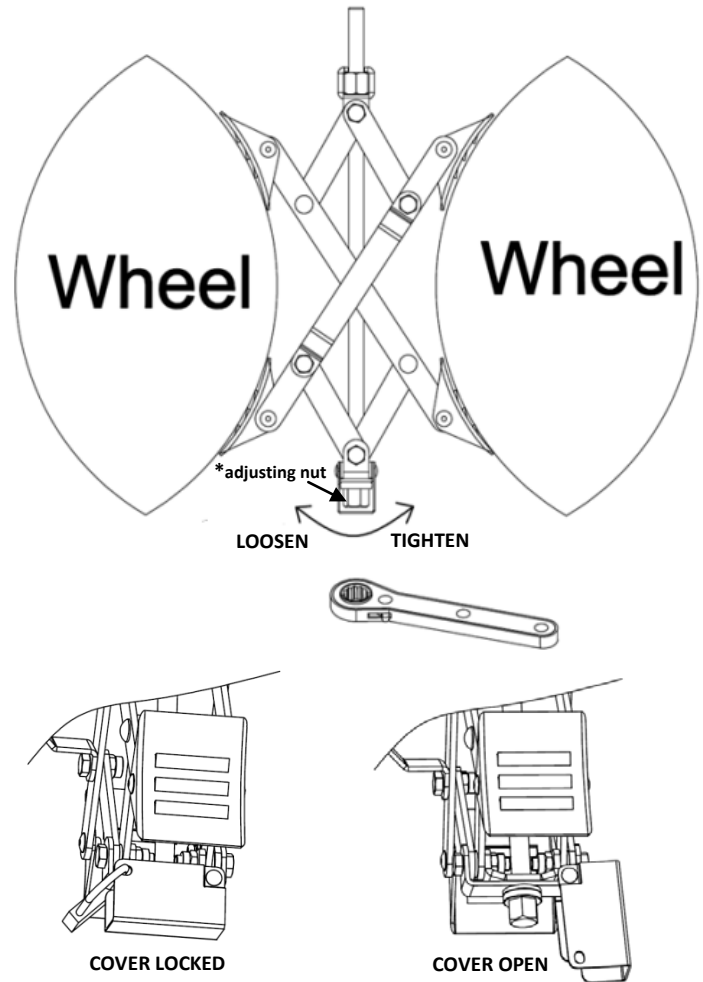

**REGISTER  
YOUR PRODUCT**

Please visit our website  
[www.ultra-fab.com](http://www.ultra-fab.com)  
click on the **WARRANTY** tab and select  
**REGISTER YOUR WARRANTY.**

**As a registered ULTRA-FAB customer, you'll be able to:**

- Stay informed of new products, announcements, and special offers.
- Get faster updates and news by including your email address.